




# MacBook Air 11" Early 2014 Battery Replacement

Replace the Battery in your MacBook Air 11" Early 2014.

Written By: Miroslav Djuric

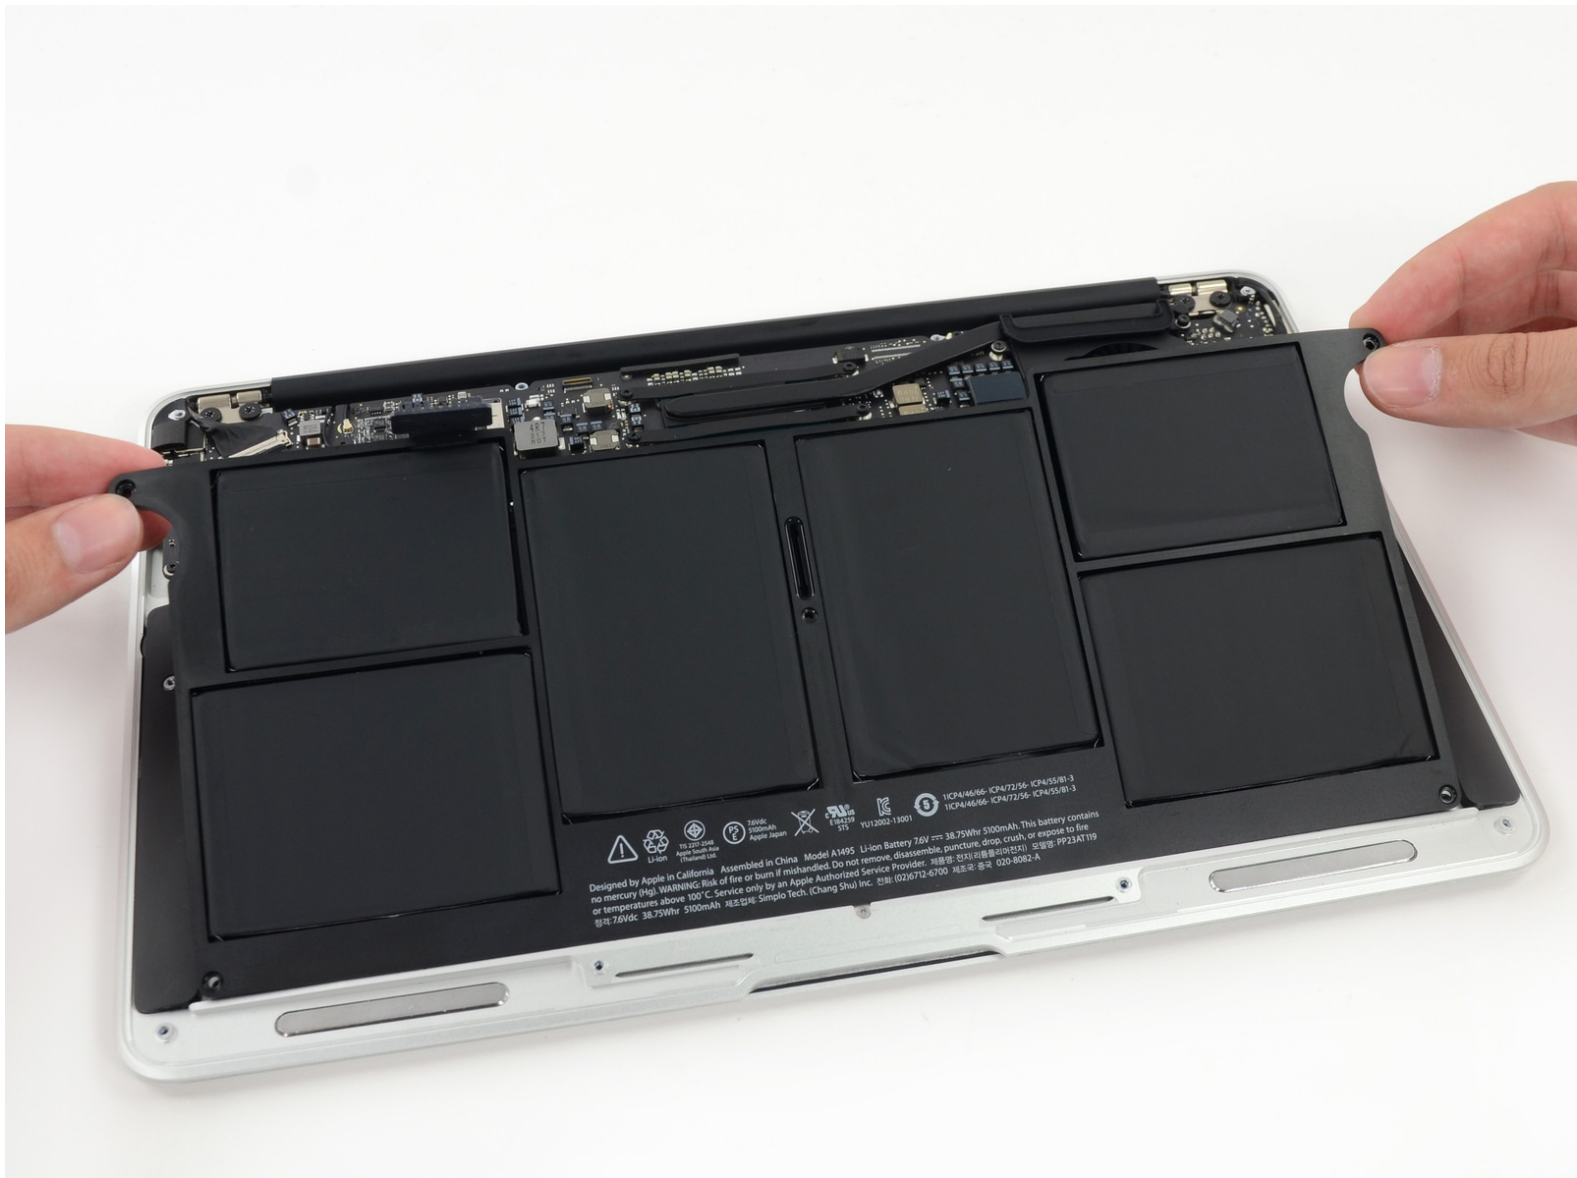

## INTRODUCTION

Use this guide to replace the battery to restore freedom from your charger to your MacBook Air.

---



### TOOLS:

- [P5 Pentalobe Screwdriver Retina MacBook Pro and Air](#) (1)
- [Spudger](#) (1)
- [T5 Torx Screwdriver](#) (1)



### PARTS:

- [MacBook Air 11" \(Mid 2010 to Early 2015\) Replacement Battery](#) (1)

## Step 1 — Lower Case



- ❗ Shut down and close your computer. Lay it on a soft surface top-side down.
- Remove the following ten screws:
  - Two 8 mm 5-point Pentalobe screws
  - Eight 2.5 mm 5-point Pentalobe screws
- ❗ The special screwdriver needed to remove the 5-point Pentalobe screws can be found [here](#).


## Step 2



- Wedge your fingers between the display and the lower case and pull upward to pop the lower case off the Air.

## Step 3 — Battery Connector




 In this step you will disconnect the battery to help avoid shorting out any components during service.

- Use the flat end of a spudger to pry both short sides of the battery connector upward to disconnect it from its socket on the logic board.
- Bend the battery cable slightly away from the logic board so the connector will not accidentally bend back and make contact with its socket.




## Step 4 — Battery

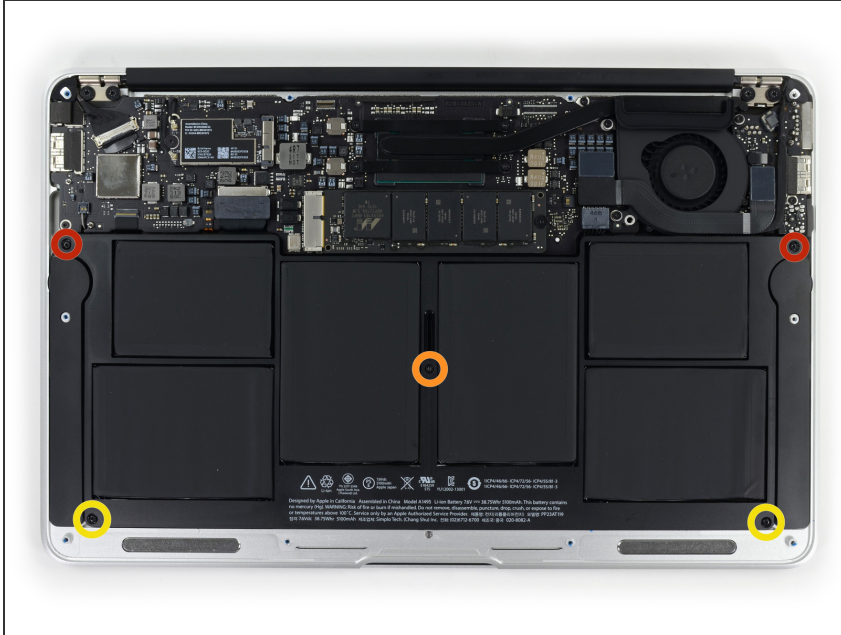

- Remove the following five screws securing the battery to the upper case:
  - Two 5.2 mm T5 Torx screws
  - One 6 mm T5 Torx screw
  - Two 2.6 mm T5 Torx screws

## Step 5

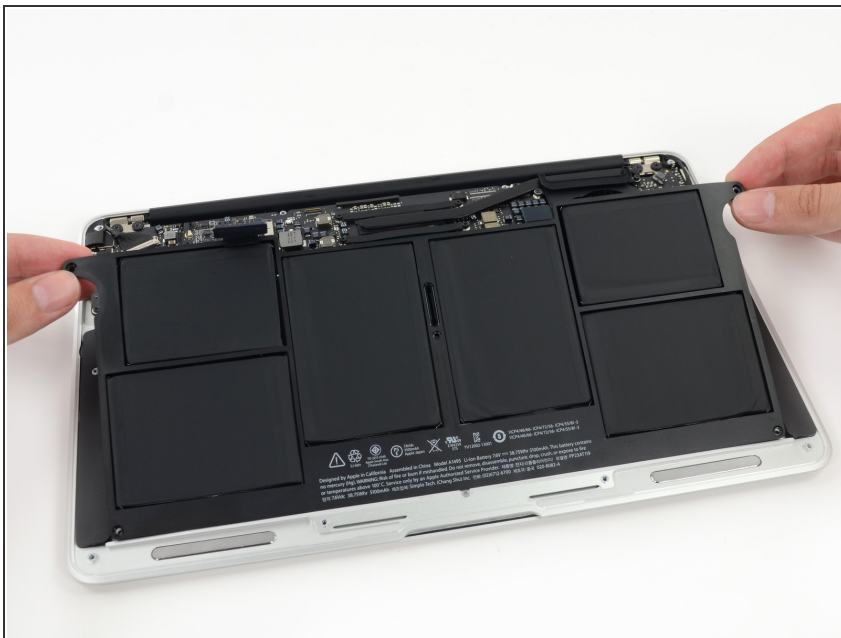

- ⚠ When handling the battery, avoid squeezing or touching the six exposed lithium polymer cells.
- Lift the battery from its edge nearest the logic board and remove it from the upper case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-07 12:25:43 PM.